 
 


Level 10 UPstage360

快速使用手冊

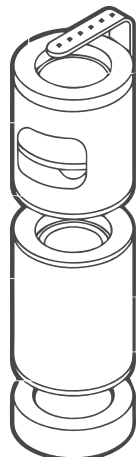

提示：
1) 開機初始值設定為Dock音源模式。音源切換順序為Dock → 藍牙 → AUX。
2) 當電源燈號閃爍時，表示電池電量不足或正在充電。
有關更多訊息及用戶提示，歡迎參訪網站：
www.level-ten.com/support

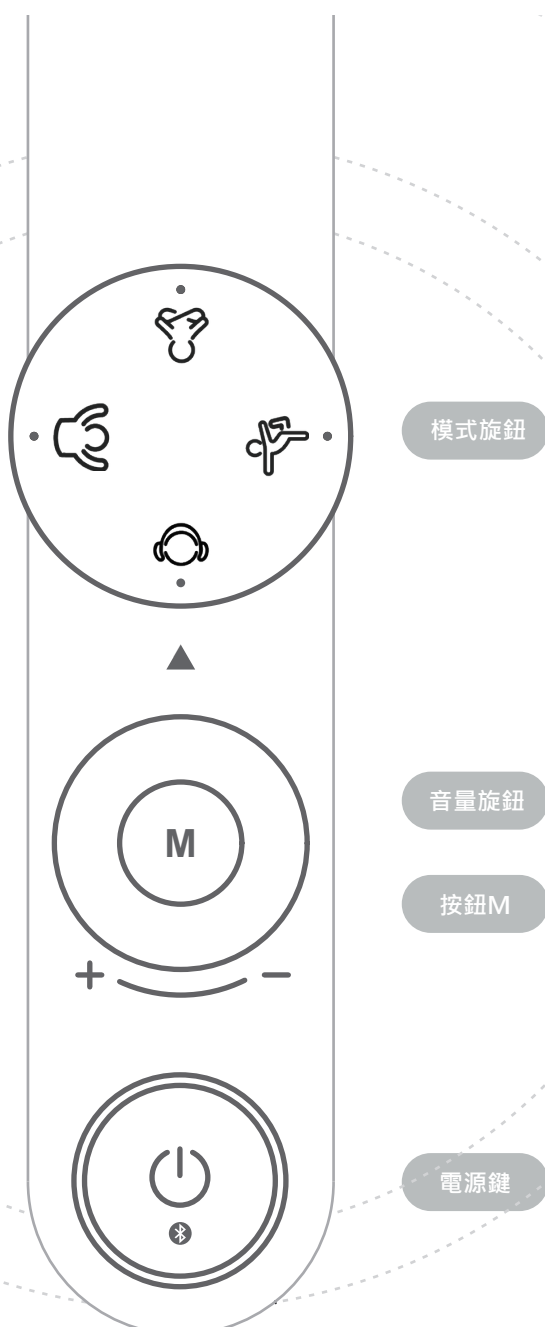

01 開/關機

 

長按電源鍵 (3秒)
開機/關機

02 切換通道


- 音源切換順序為Dock → 藍牙 → AUX。
- Dock音源：開機初始值為Dock音源模式，或於AUX音源模式下短按電源鍵一秒。Dock音源模式下，電源燈號顯示為紅色。
- 藍牙音源：在Dock音源模式下，短按電源鍵一秒，電源燈號將顯示藍色。
- AUX音源：在藍牙音源模式下，短按電源鍵一秒，電源燈號將顯示為白色。

Amazon Echo Dot

於Dock音源模式下，可連結Amazon Echo Dot使用。UPstage360開機後，第一次使用Echo Dot需等待60秒，待Echo Dot開機完畢後即可正常使用。

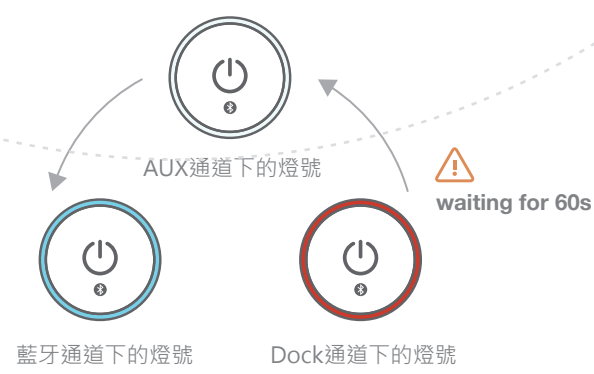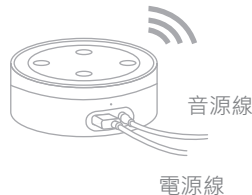


03 調節音量

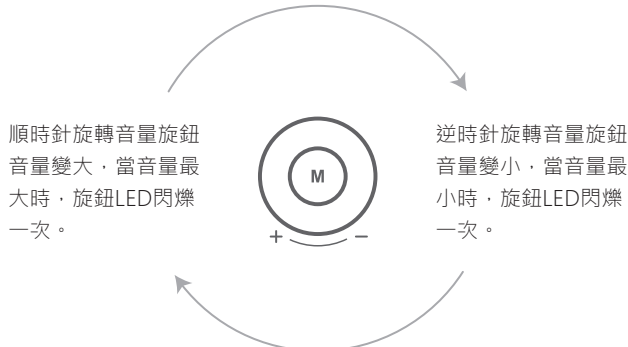 

04 手機與音響連結

- 於藍牙音源模式下，短按一次按鈕M，進入配對模式。
- UPstage360發出“嗶”一聲，表示藍牙連線成功。

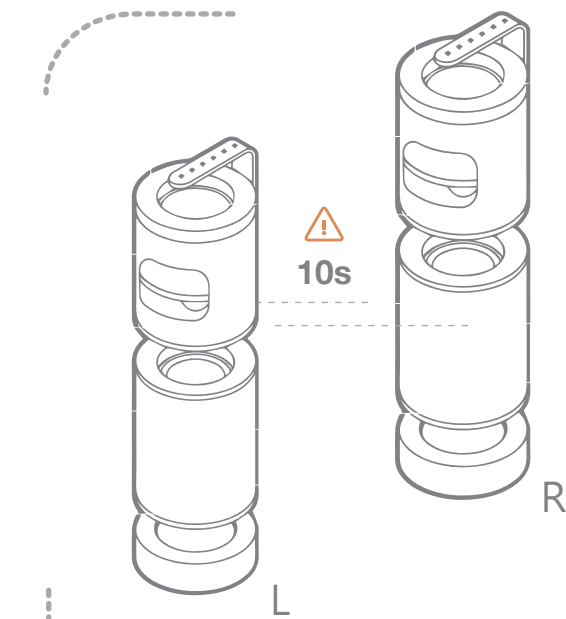


06 切換模式

指針與模式旋鈕上相應的圖標對齊時，進入該圖標所處的情境模式，同時LED亮起。

指針指到模式旋鈕上兩個圖標之間時，情境模式關閉，同時LED熄滅。

注意：情境模式旋鈕的旋轉角度只有270度(注意旋轉力度，避免旋鈕毀損)。

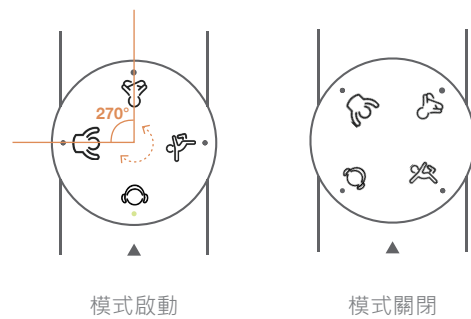

規格

- 連結方式: 藍牙、音源線輸入端、Echo Dot、Chromecast
- 功率: 4 X 30 watt
- 喇叭單體: 2 X 3" woofer、4 X passive radiators、1 X 2" mid-range、1 X 1" tweeter
- 頻率響應: 40 Hz - 40k Hz (-3dB)
- 總諧波失真: < 0.02%
- 阻抗: 4 ohms
- 輸入電壓: 100 - 240 V
- 尺寸: 130 X 130 X 480 mm
- 重量: 3.2 kgs
- 電池: 2600 mAh、6 - 10小時播放時間




<http://www.level-ten.com>
Engineered by Soundmatters
Manufacturer by TB Speaker




Level 10 UPstage 360

Quick Start Guide

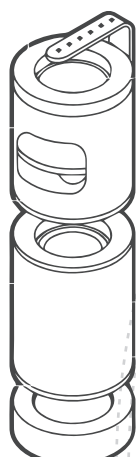

- TIPS:
- 1) When initially powered on, the UPstage360 power LED will flash for 60 seconds in mute mode.
 - 2) Flashing power LED indicates low battery or power condition.
 - 3) Upstage360 remains in last input selected, unless unplugged or battery dies.

For more information/user tips visit www.level-ten.com/support

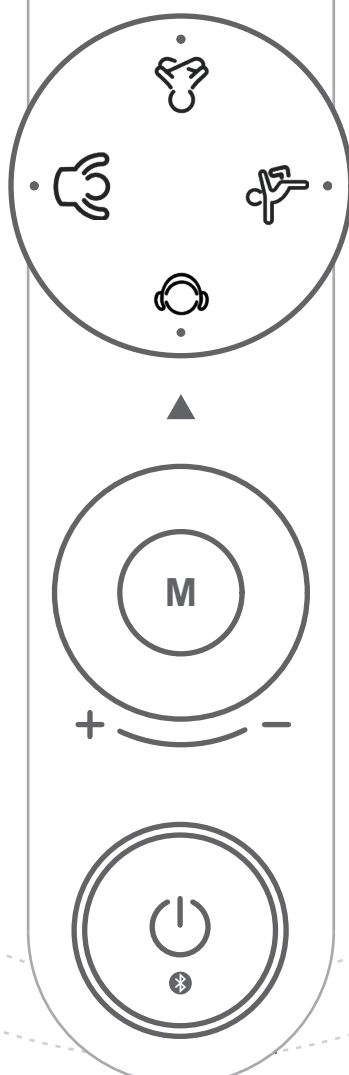

Mood Scenario Icons

Volume Knob

Mode "M" Button

Power/ Input Scroll Button

01

Power On/Off

ON: Long Press (3 sec) /
OFF: Long Press (3 sec)



 
02

Input Selection

Use Short Presses (1 sec) to Toggle thru Input Sources, and Waiting for 60 sec short press

Amazon Echo Dot

Smart Dock Connections

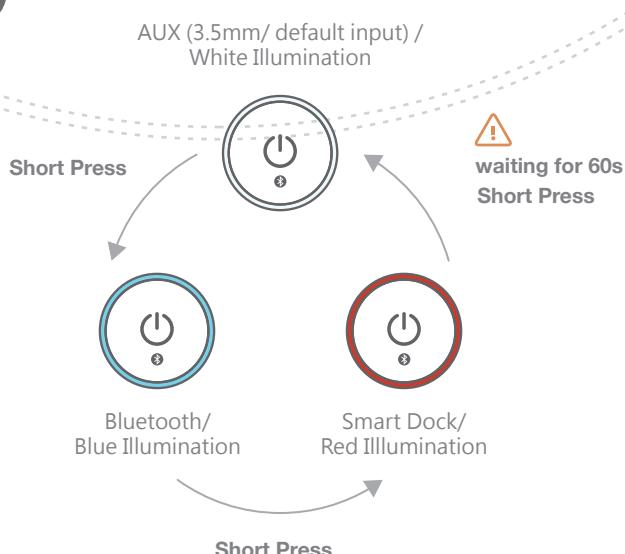

03

Volume Adjustment

Turn volume knob counterclockwise to decrease volume. Knob LED flashes once at minimum volume



Turn volume knob clockwise to increase volume. Knob LED flashes once at maximum volume

Bluetooth Pairing

04

1. Briefly press "M" button to enter pairing mode and search for (and pair to) a device. THIS IS ONLY NECESSARY THE FIRST TIME YOU PAIR WITH A DEVICE.
2. After successful pairing, the audio will automatically connect to the phone/device when turned on.
3. Hearing a "Beep" sound means connection is successful.



05

Wireless linking two UP-stage360 units for separate L + R stereo

1. DO NOT CONNECT TO AN AUDIO SOURCE (i.e. PHONE) UNTIL FINISHED LINKING THE TWO UPSTAGES (L & R).
2. Press and hold UPstage A Mode (M) button for 2 seconds plus.
3. While pressing UPstage L' s "M" button, then press and hold the UPstage R' s "M" button, and wait for the connection to succeed, about 10 seconds
4. Hearing "Doop Doop" twice means the link is successful.



NOTE: All source connections, including Aux-in, Bluetooth, Smart Dock (i.e. Echo Dot) should be made thru UPstage L.


06

Mood Scenarios

Turn the knob so pointer is aligned with the corresponding icon on the Mode Dial, as indicated by the lit LED .

When the pointer is between the two icons on the mode dial, the mood sequence (and LED indicator) are off.

These mood sequences can be listened to by themselves, or in conjunction with any other input source.

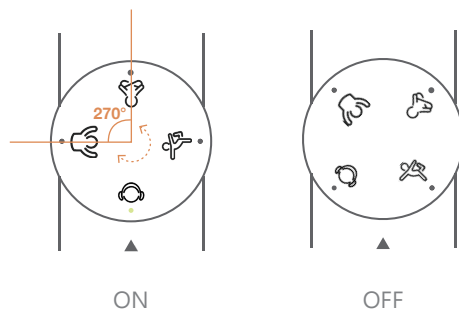

Specification

- Connection: Bluetooth, Aux-in, Echo Dot, Chromecast
- Amplifier: 4 X 30 watt
- Transducers: 2 X 3" woofer · 4 X passive radiators · 1 X 2" mid-range · 1 X 1" tweeter
- Frequency Range: 40 Hz - 40k Hz (-3dB)
- Total Harmonic Distortion: < 0.02%
- Impedance: 4 ohms
- Power Supply: 100 - 240 V
- Dimensions: 130 X 130 X 480 mm
- Weight: 3.2 kgs
- Battery: 2600 mAh · 6 - 10 hrs Playtime



<http://www.level-ten.com>

Engineered by Soundmatters
Manufacturer by TB Speaker

