 


waterpik™

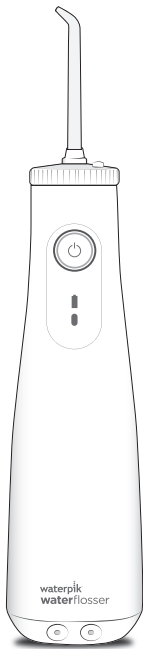

# Waterpik™ Water Flosser Model WF-10

Waterpik™ 沖牙機  
型號 WF-10

[www.waterpik.com](http://www.waterpik.com)

samcooper**design**

**DO NOT PRINT**

**DATE:** 02.07.2024

**CLIENT:** WATERPIK

**FILENAME:** 20033211-FAA\_WF-10W\_TraditionalL\_IM\_r6.indd

**DESCRIPTION:** WF-10 Instruction Manual

**LANGUAGES:** 2 [Eng, Trad Chinese]

**FILE TYPE:** Adobe InDesign CC

**SCD JOB# / PREPARED BY:** 23WPOH7979 / BS / BT

**CLIENT ROUND:** 6

**SCALE:** 100%

**UPC:** N/A

**SIZE:** 14.0 x 4.5 flat; 7.0 x 4.5 folded

**FORM NUMBER:** 20033211-F AA

**INK:** Process Black

**NOTES:**

# IMPORTANT SAFEGUARDS

## READ ALL INSTRUCTIONS BEFORE USING.

- This product is for household use.

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

### DANGER:

#### To reduce the risk of electrocution:

- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place or drop the product into water or other liquid.
- Do not reach for a product that has fallen into water. Unplug immediately.
- Do not handle the user supplied USB power supply (power adapter) with wet hands.

- Unplug the user supplied USB power supply (power adapter) when not in use.
- Check the charging cord and user supplied USB power supply (power adapter) for damage before the first use and during the life of the product.

### WARNING:

#### To reduce the risk of burns, electrocution, fire, or injury to persons:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this product only for its intended use as described in product literature or as recommended by your dental professional.

- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact Water Pik, Inc. at 1-800-525-2774 or visit [www.waterpik.com](http://www.waterpik.com).
- A user supplied USB-A wall charger (power adapter), safety certified (IPX4, Class II) with a rated output of 5.0 VDC, 1.0 A is required to charge this product.
- Do not plug this device into a voltage system that is different from the voltage system specified on the device or charger.
- Keep the charging cord away from heated surfaces.
- Never drop or insert any object into any hose or opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Fill reservoir with warm water or other dental professional recommended solutions only.
- Only use tips and accessories recommended by Water Pik, Inc. as identified in this instruction manual.
- If the charging cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

- Do not use iodine, saline (salt solution), or water insoluble concentrated essential oils in this product. Use of these can reduce product performance and will shorten the life of the product.
- Do not direct water from the Water Flosser under the tongue, into the ear, nose or other delicate areas. This product is capable of producing pressures that may cause serious damage in these areas.
- Do not direct water into the nose or ear. The potentially deadly amoeba, *Naegleria fowleri*, may be present in some tap water or unchlorinated well water and may be fatal if directed into these areas.
- If your physician advised you to receive antibiotic premedication before dental procedures, you should consult your dentist before using this instrument or any other oral hygiene aid.
- Remove any oral jewelry prior to use of this product.
- Do not use if you have an open wound on your tongue or in your mouth.
- Do not use the Water Flosser for more than five minutes in each two-hour period.

- If the Pik Pocket™ tip (not included in all models) separates from the shaft for any reason, discard tip and shaft and replace with new Pik Pocket™ tip.
- There are no user serviceable electrical parts in this product and it does not require maintenance.
- Remove the charging cord from the unit prior to filling the reservoir.
- Ensure contacts on the cord, the unit and the power adapter are clean and dry while the unit is being charged.
- Magnetic field: Pacemakers and similar implanted medical devices may be affected by magnet. Contact your doctor with any questions.
- Do not expose the battery or appliance to excessive temperatures.


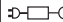













**SAVE THESE  
INSTRUCTIONS**

Product Description	5
Getting Started	6
Cleaning and Troubleshooting Your Waterpik™ Water Flosser	9
Battery Care, Battery Disposal/Recycling, Battery Removal	10
Limited One-Year Warranty	11


## SYMBOLS GLOSSARY

 (Not all symbols apply to all products)


Explanation of symbols used on Water Pik, Inc. product labels and packaging. Applicable symbols for a specific product are found on that product's labels and packaging.

Symbol	Definition	Symbol	Definition	Symbol	Definition	Symbol	Definition
	Refer to instruction manual		Detachable Power Supply		Do not use this device in a shower, bathtub and do not immerse in any liquid.		Regulatory Compliance Mark
	Manufacturer		Direct Current (DC) Voltage		Authorized Representative in the European Community		Separate collection for waste electrical and electronic equipment.
IPX7 or IPX4	Ingress Protection Code		Alternating Current (AC) Voltage		CE marking of conformity		Contains a recyclable Li-ion batter
	IEC Class II Equipment		Do not immerse this device in any liquid.		UK Conformity Assessed		Contains a recyclable Ni-MH battery

1. Tip rotator
2. Power button
3. Mode/pressure button
4. Battery charge indicator
5. Charging contacts
6. Tip
7. Tip eject button
8. Reservoir fill door
9. Reservoir




Charging Cable  
20026734-1 White

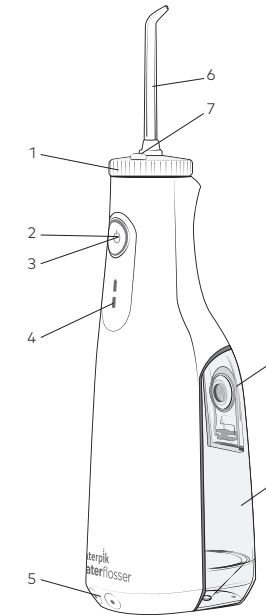 

## TIPS




- |  |  |
|--|--|
| <b>A. Orthodontic Tip*</b><br>- Braces/General use                                   | <b>D. Classic Jet Tip**</b><br>- General use                                       |
| <b>B. Pik Pocket™ Tip*</b><br>- Periodontal Pockets/Furcations                       | <b>E. Tongue Cleaner**</b><br>- Fresher breath                                     |
| <b>C. Plaque Seeker™ Tip*</b><br>- Implants/Crowns/Bridges/<br>Retainers/General use | <b>F. Travel Plug</b><br>- Keeps excess water from<br>draining out while traveling |
 
## NOT ALL TIPS INCLUDED IN ALL MODELS

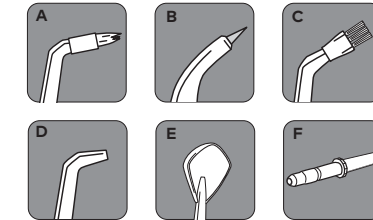

\*Replace Every 3 months \*\*Replace Every 6 months

   To find detailed information about tips, other accessories, and product usage please visit our website at [www.waterpik.com](http://www.waterpik.com) or email at [InternationalService@waterpik.com](mailto:InternationalService@waterpik.com).

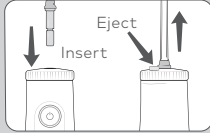

### Charging Unit Prior to First Use

Connect the USB charging cable to USB wall charger.

**NOTE:** See Important Safeguards for required USB wall charger specifications.

Plug the USB wall charger into a wall outlet and connect the magnetic charging cable to the unit and charge for 4 hours.

**Ensure contacts on BOTH the cord and unit are clean and dry before connecting the charger.**

The LED light will display a single, rapid blink every 3 seconds when unit is fully charged and the charger is connected. A full charge will last for approximately 1 week of typical use. When the batteries are in need of charging (approximately 30% charge left) the charge indicator light will blink 8 times quickly after use to indicate that you should recharge the unit. A complete recharge will take 3-4 hours. If you use your Water Flosser once a day or less, it is recommended you charge it once a week. If you use it twice a day or more, charge the unit more frequently.

 
 
### Filling the Reservoir

Remove the magnetic power cord from the unit prior to filling reservoir and product use. Lift flip top on reservoir and fill the reservoir with lukewarm water.

### Inserting and Removing Tips

Insert tip into the center of the knob at the top of the Water Flosser handle. Press firmly until the tip clicks into place. To remove the tip from the handle, press the tip eject button and pull tip from the handle.

**CAUTION: Do not press tip eject button while unit is running.**

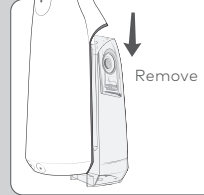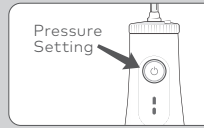

### Adjusting the Pressure Setting

- 2 pressure settings;
- Press power button to power on and switch settings.
- LED: Blink 3 times quickly every second:

Slow glow: the batteries are charging.

Single, rapid blink every 3 seconds: batteries are fully charged.

### Recommended Technique

Lean low over sink and place tip in mouth. Aim the tip toward gumline, and turn the unit ON.

 
For best results, start with the back teeth and work toward the front teeth. Glide tip along gumline and pause briefly between teeth. Continue until you have cleaned the inside and outside of both the upper and lower teeth.

Direct the jet stream at a 90-degree angle to your gumline. **Slightly close lips to avoid splashing** but allow water to flow freely from mouth into the sink. Keep unit upright during use for best results.

### When Finished

Turn the unit off. Empty any liquid left in the reservoir.

If desired, the reservoir may be removed from the power handle by simply pulling down on the reservoir to remove.

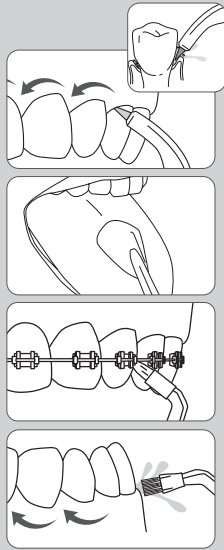

**NOTE: NOT ALL TIPS INCLUDED WITH ALL MODELS.**

#### TIP USAGE

##### Pik Pocket™ Tip

The Pik Pocket™ tip is specifically designed to deliver water or anti-bacterial solutions deep into periodontal pockets.

To use the Pik Pocket™ tip, **set the unit to the lowest pressure setting**. Place the soft tip against a tooth at a 45-degree angle and gently place the tip under the gumline, into the pocket.

##### Tongue Cleaner Tip

Set to lowest pressure setting, place tip in the center/middle of your tongue about half way back. Pull forward with light pressure. Increase pressure as you prefer.

##### Orthodontic Tip

To use the orthodontic tip, gently glide tip along gumline, pausing briefly to lightly brush area between teeth and all around orthodontic bracket, before proceeding to the next tooth.

##### Plaque Seeker™ Tip

To use the Plaque Seeker™ tip, place the tip close to the teeth so that the bristles are gently touching the teeth. Gently glide tip along gumline, pausing briefly between teeth to gently brush and allow the water to flow between the teeth.



#### Using Mouthwash and Other Solutions

Your Waterpik™ Water Flosser can be used to deliver mouthwash and antibacterial solutions. For ease of adding other solutions remove the reservoir (see "When Finished" section) and add from top opening on reservoir. If you are adding additional water you may replace the reservoir and fill reservoir fully with the fill door. After using any special solution, rinse unit to prevent clogging by partially filling reservoir with warm water and running unit with tip pointed into sink until unit is empty.

#### Cleaning

Never immerse unit in water. Before cleaning, unplug from the electrical outlet. Clean the product when necessary by using a soft cloth and mild non-abrasive cleanser to wipe exterior.

It is recommended that the reservoir is removed and cleaned weekly.

#### Removing Hard Water Deposits / General Cleaning

Hard water deposits may build up in your unit, depending on the mineral content of your water. If left unattended, it can hinder performance. Cleaning internal parts: add 1 tablespoon of white vinegar to a full reservoir of warm water. Point the handle and tip into sink. Turn unit ON and run until reservoir is empty. Rinse by repeating with a full reservoir of clean warm water.

This process should be done every 1 to 3 months to ensure optimal performance.

### Battery Care

If the Water Flosser is to be stored for an extended period of time (six months or more), be sure to fully charge it prior to storage.

Do not expose the battery or appliance to excessive temperatures.

### Battery Disposal/Recycling

 
 
 


This product contains a **rechargeable Nickel Metal Hydride**. The battery is not replaceable. At the end of product life, do not dispose of in household garbage or recycling bins. Please recycle at your nearest recycling center or take to hazardous waste collection point to comply with local and state regulations.

Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

Please contact your local waste administrative department for any questions.

**Note: The rechargeable battery is not replaceable, remove only at end of product life.** This process is not reversible and voids the product warranty.

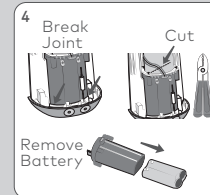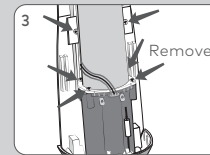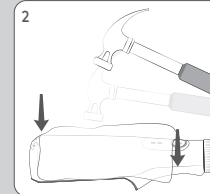

### Battery Removal

To remove the rechargeable battery for recycling, please discharge the battery fully before removing.

Observe basic safety precautions when you follow the procedure below. Be sure to protect your eyes, hands, fingers and surface on which you work.

1. Power off the device, remove reservoir.
2. Wrap in a towel and hit with a hammer to break the joint between the front, rear, and lower housings.
3. Remove 2 screws holding pump assembly to rear cover and 4 screws holding battery housing to pump assembly.
4. Carefully break the joint between the battery housing and rear cover.  
Cut battery wires (careful not to short positive and negative wires together) and remove battery.
5. Recycle/dispose of the battery at your nearest recycling center or take to a hazardous waste collection facility to comply with local and state regulations.

#### WARNING:

**DO NOT cut both battery wires at the same time.**

**DO NOT disassemble, puncture, hit, squeeze or throw the battery into fire.**

**Service Maintenance**

Waterpik™ Water Flossers have no consumer-serviceable electrical items and do not require routine service maintenance. For all accessories go to [www.waterpik.com](http://www.waterpik.com) or email [InternationalService@waterpik.com](mailto:InternationalService@waterpik.com).

Refer to the serial and model numbers in all correspondence. These numbers are located on the bottom of your unit. Replacement tips can be purchased from [www.waterpik.com](http://www.waterpik.com) or email [InternationalService@waterpik.com](mailto:InternationalService@waterpik.com).

Water Pik, Inc. warrants to the original consumer of this new product that it is free from defects in materials and workmanship for 1 year from the date of purchase.

**Consumer will be required to submit the original purchase receipt as proof of purchase date and if requested, the entire product, to support a warranty claim.** Water Pik, Inc. will replace at its discretion the product, which in its opinion is defective, provided the product has not been abused, misused, altered or damaged after purchase, was used according to instructions, and was used only with accessories or consumable parts approved by Water Pik, Inc. This limited warranty excludes accessories or consumable parts such as tips, etc. **Use with improper voltage will damage product and VOID warranty.**

This warranty gives you specific legal rights. You may also have other rights that vary, depending on the law in your place of residence.



## 重要安全事項

請在使用前閱讀所有說明。

- 本產品供家庭使用。

當使用電器產品時，尤其是有兒童在場時，請務必遵循下列基本的安全防範措施，包括以下內容：

### 危險：

為了降低傷害危險，請注意以下事項：

- 切勿將本產品放置或存放在可能掉落或被拉扯入浴缸或水槽的位置
- 切勿把本產品放入或掉進水或其他液體中
- 本產品若不慎掉進水中，切勿伸手拿取，應立即拔下電源
- 切勿用濕手使用本產品插頭。 / 切勿在洗澡時使用本產品。
- 使用完畢務必拔除產品的電源插頭
- 首次使用本產品前或是本產品使用期間，請務必注意檢查電源線及插頭是否損壞。

### 警告：

為降低燒傷、觸電、火災或個人生命傷害的風險，請謹記：

- 除非有安全負責人在旁邊監護或指導，嚴禁體弱、智障或知覺欠佳的人或缺乏經驗和知識的人（包括兒童）使用此設備。
- 請避免兒童玩弄本設備。
- 按照說明書中的規定或者牙科專家的建議使用本產品。
- 如果電源線或插頭損壞、產品運作不正常、產品摔落、損壞或掉入水中，請勿使用本產品。請聯繫 Water Pik, Inc.: [www.waterpik.com](http://www.waterpik.com) 或 [InternationalService@waterpik.com](mailto:InternationalService@waterpik.com)。
- 提供的 USB-A 充電器（電源配件），經安全認證（IPX4，II 級），額定輸出為 5.0 VDC，1.0 A。
- 切勿將本產品連接至充電器規範以外的電壓
- 電源線請遠離加熱表面。
- 切勿在任何開口或者軟管中放入或插入異物。

- 切勿在室外使用或在使用氣霧劑（噴霧劑）或氧氣的場所使用或操作本產品。
- 用水或牙醫推薦的溶液將水箱注滿。
- 僅允許使用 Waterpik™ 公司推薦的刷頭和附件。
- 如電源線損壞，則必須使用製造商或其服務代理商提供的專用電源線進行更換。
- 切勿在本產品中使用碘、鹽水或非水溶性濃縮精油。若使用會降低本產品性能並縮短本產品使用壽命。
- 切勿將水注入舌下，耳朵，鼻子或其他敏感部位。本產品產生的壓力可能對這些部位造成嚴重傷害。
- 切勿將水直接注入鼻子或耳朵。潛在的變形蟲可能存在於一些自來水或未氯化的水中，如果直接進入注入可能會致命。
- 如果醫生建議您在牙科手術前服用抗生素等術前用藥，應該在使用本產品或其他口腔衛生輔助設備之前諮詢您的牙醫。

- 使用本產品前請摘除任何口腔牙飾。
- 如舌頭或口腔有開放性傷口，請勿使用本產品。
- 切勿在每兩小時內使用本產品超過 5 分鐘。
- 如果 Pik Pocket 深層/牙周噴頭（並非所有型號都包含）因任何原因與手柄分離，請丟棄該噴頭和手柄並立即更換新的 Pik Pocket 深層/牙周噴頭。
- 本設備中無消費者可維修的配件，本設備不需要維修。
- 注水前務必拔除插頭
- 本設備充電時，請確保電源線、設備與插頭的接觸點乾燥與潔淨
- 磁力傳感器：起搏器及類似植入式醫療設備可能受磁性影響。如有問題請直接聯繫您的醫生
- 請勿將電源或本設備曝曬在高溫下

務必謹記上述說明

 
產品說明	19
使用前的準備事宜	20
Waterpik™ 沖牙機的清洗和故障排除	23
電池保養、電池處理/回收、電池拆卸	24
一年有限保固	26

符號表(非所有符號都適用所有產品)


Waterpik, Inc 產品標籤與外包裝使用說明。特定產品符號請見該產品標籤與外包裝說明

符號	定義	符號	定義	符號	定義	符號	定義
	請參閱使用說明書		卡拆卸電源		請勿在淋浴或浴缸中使用本產品		符合認證標誌
	製造商		直流電壓		歐盟授權代表		廢棄電器電子設備分類收集
IPX7 or IPX4	保護代碼		交流電壓		CE認證		鋰電池回收標章
	Class II 電源		請勿將本產品放入任何液體中		UKCA認證		鎳電池回收標章

1. 噴/刷頭旋鈕
2. 電源 開/關
3. 模式/壓力按鈕
4. 電池電量指示
5. 充電口
6. 噴/刷頭
7. 刷頭彈出按鈕
8. 水槽補水口
9. 水箱




20026734-1 白色的

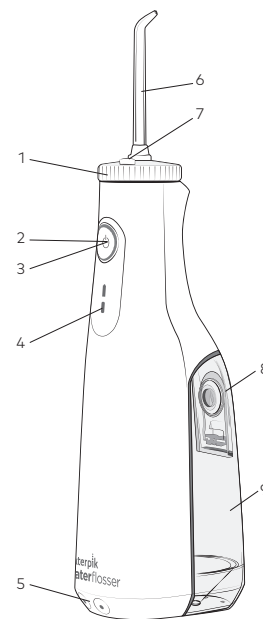 

## 噴/刷頭

- |                          |             |
|--------------------------|-------------|
| A. 矯正噴頭*                 | D. 標準噴頭**   |
| - 牙齦                     | - 一般用途      |
| - 一般用途                   | E. 舌苔清洗噴頭** |
| B. Pik Pocket™ 深層/牙周噴頭*  | - 清潔口腔      |
| - 牙周/牙根分叉                | F. 旅行插頭     |
| C. Plaque Seeker™ 牙菌斑噴頭* | - 避免旅行期間    |
| - 植牙                     | 多餘水分流出      |
| - 齒冠                     |             |
| - 牙橋                     |             |
| - 一般用途                   |             |

 並非所有的型號均包含所有類型的刷頭。

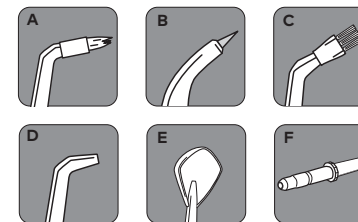


\*每3個月進行更換 \*\*每6個月進行更換  
有關刷頭、其他配件和產品使用的詳細資訊，請訪問我們的網站  
[www.waterpik.com](http://www.waterpik.com)，或寄送電郵至 [InternationalService@waterpik.com](mailto:InternationalService@waterpik.com)。



第一次使用前請為本機充電  
將電源線插入牆面插頭

 然後將磁性充電器放在本機前約4小時(見圖示)。連接充電器前,請確保電源線和本機觸點處於清潔乾燥狀態。



本機充滿電及充電器連接成功後,LED指示燈將每3秒快速閃爍一次。充滿一次電可供約一周正常使用。當電池需要充電(約剩餘30%電量)時,充電指示燈將在使用後快速閃爍8次,提醒您為本機充電。充滿電約需3-4小時。如果您每天使用水牙線(Water Flosser)或以下,建議您每週充電一次。如每天使用兩次以上,則充電頻率需提高。



水槽補水

在補充水量水和使用本品前,請務必先將電源線從機器上拔出。提起水槽頂蓋,並將溫水灌入水槽中。



噴/刷頭的插入與移除

將噴/刷頭插入沖牙機手柄的中心,用力向下按,直到噴/刷頭卡入到位。要從手柄上取下噴/刷頭,按壓噴頭彈出按鈕即可。

當心:設備運行時,請勿按噴頭彈出按鈕。



調整壓力模式設置方式:

1. 兩段壓力模式設置
2. 按電源開關鍵並切換壓力模式設置
3. LED 閃爍通知:

快速閃爍三次:電池需要充電

緩慢閃爍:電池正在充電

每三秒快速閃爍一次:電池已完成充電



推薦技巧

倚靠水池身體壓低,將噴頭放入嘴中。將噴頭對準牙齦線,並啟動設備。

為獲得最佳效果,從後牙開始朝門牙方向清洗。將噴頭沿牙齦線移動,並在齒間短暫停留。繼續清洗,直到上齒和下齒的內外側均已洗淨。

把噴頭放在口中,使噴射流與牙齦線呈90度角。微微閉合嘴唇,避免液體飛濺,同時可讓液體順利從口中流入水池。使用過程中,請保證本機直立,以便獲得最佳使用體驗。

 


清洗完成後

關閉設備。倒掉殘留在水箱中的所有液體。拔掉設備的電源插頭。

注意:如果除了水之外您還使用漱口水或其他溶液,請參考「使用漱口水和其他溶液」部分。



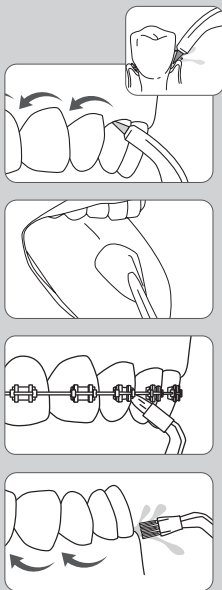

注意：並非所有的型號均包含所有類型的刷頭。

#### 噴/刷頭的用法

##### Pik Pocket™ 深層/牙周噴頭

Pik Pocket™ 深層/牙周噴頭專為將水或抗菌溶液輸送至深層牙周袋而設計。

使用PikPocket™ 深層/牙周噴頭時，請務必將產品設置為最小壓力值。將柔性噴頭正對牙齦線呈45度角靠在一顆牙上，輕緩地移動噴頭直至其置於牙齦偏下位置，進入牙周袋內。開啟設備，沿牙齦線滑動清洗。

##### 舌苔清洗噴頭

使用舌苔清洗噴頭時，請將壓力設置為最小值。將刷頭放在舌前後部等距的中央/中線位置，然後開啟沖牙機。從低壓開始向前推動。根據您的喜好增加壓力。

##### 矯正噴頭

使用矯正噴頭時，沿著牙齦線輕輕滑動噴頭，在齒間和矯正托槽周圍所有部位短暫停留並輕刷，然後滑動噴頭清洗下一顆牙齒。

##### Plaque Seeker™ 牙菌斑噴刷頭

使用Plaque Seeker™ 牙菌斑噴刷頭時，將刷頭貼近牙齒使得刷毛能夠輕觸牙齒。沿著牙齦線輕柔地滑動刷頭，在牙縫處稍作停留並輕輕地刷動，讓水流經牙縫。



#### 使用漱口水及其它方案

Waterpik™水牙線可用漱口水及其它抗菌溶劑。為便於添加其它液體，可拆下水槽（見“完成時”章節），並從水槽頂部灌入。

如要繼續添加水，您可更換水槽並通過補水口添水。使用

任何特殊溶液後，請沖洗本品以免堵塞，可在水槽中灌入部分溫水，並將噴頭對向水池後打開運行，直至設備內水空。

#### 清潔

請勿將本機浸入水中。清潔前，請將電源插頭從電源插座中拔下。必要時可使用軟佈和溫和的非腐蝕式清潔劑擦拭外部。

建議每週拆下水槽進行清潔。

#### 清除硬水沉積/一般清潔

硬水沉積物可能會在您的電器上積累，這取決於水中的礦物質含量。如果對此不管，會降低電器的性能表現。

清潔內部零件：將水箱灌滿溫水，並加入2湯匙白醋。把手柄和噴頭指向盥洗池內。打開電器，讓其運行，直到水箱變空。再向水箱加滿乾淨溫水，重複上述操作來進行沖洗。

應每隔1至3個月重複該操作，以確保最佳性能。

**電池保養**

 
 
 
如水牙線存放時間較長（六個月以上），請務必充滿電後再收起保存。本機含Nickel Metal Hydride電池。電池壽命到期後，請根據當地或州/國家要求在距您最近的回收中心將本機回收處理。電池不可更換。

**電池處理/回收**

產品包含電池和/或可回收電子垃圾。為保護環境，請勿將其與家庭垃圾一起處置。電池壽命到期後，請根據當地行政法規進行處理或回收。

請及時處理廢棄電池。遠離兒童。切勿拆卸後丟入火中。電池壽命到期後，請根據當地行政法規進行處理或回收。如有任何疑問，請聯繫當地廢棄物管理部門。

警告：本產品電池不可更換。除非想要處置本品，請勿拆卸本品。否則保修服務將失效。

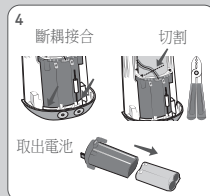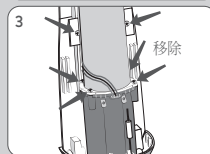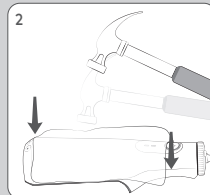**電池拆卸**

要拆卸充電電池進行回收前，請將電池完全放電。如果您計劃自己處理電池，按以下步驟拆下電池，請遵守基本的安全預防措施，請務必保護眼睛、手指和操作表面。

1. 給設備關機，拆除水槽。
2. 使用一條毛巾進行包裹，然後用錘子敲碎前後和下殼件的連接。
3. 拆下後蓋處固定泵頭的2顆螺母，和將電池盒固定在泵頭上的4顆螺母。
4. 小心地斷開電池盒和後蓋間的連接。切斷電池線（小心不要將正負極短線連在一起）並取出電池。  
拆下的電池應交由專業的回收中心安全處置。
5. 根據當地行政法規進行處理或回收

**警告：**

切勿同時剪斷電池的兩條電線  
切勿拆卸、刺穿、撞擊、擠壓電池或將電池放入火中

**維護服務**

Waterpik™ 水牙线没有消费者可维修的电气产品，也不需要日常维修保养。如需所有配件，请访问 [www.waterpik.com](http://www.waterpik.com) 或发送电子邮件至 [InternationalService@waterpik.com](mailto:InternationalService@waterpik.com)。


请参阅所有通信中的序列号和型号。这些数字位于设备底部。更换提示可以从 [www.waterpik.com](http://www.waterpik.com) 或发送电子邮件至 [InternationalService@waterpik.com](mailto:InternationalService@waterpik.com)。

Water Pik, Inc. 向這款新產品的原始消費者提供保證，自購買之日起1年內，不存在材料和工藝方面的缺陷。消費者將被要求提交原始購買收據作為證明購買日期，並且如有需要，須提交整個產品，以支持保修索賠。Water Pik, Inc. 將自行決定更換其認為有缺陷的產品，前提是確定產品在購買後未被濫用、誤用、塗改或損壞，並且根據說明來使用，僅使用Water Pik, Inc. 認可的配件或消耗部件。

此有限保修不包括附件或消耗部件，如噴/刷頭等。使用的電壓不正確會損壞產品並讓保修作廢。

本保修賦予您特定的法律權利。您可能擁有其他權利，具體取決於您居住地的法律。

# waterpik™

**Water Pik, Inc., a subsidiary of  
Church & Dwight Co., Inc.** 

1730 East Prospect Road  
Fort Collins, CO 80553-0001 USA  
844-821-4873

**[www.waterpik.com](http://www.waterpik.com)**

Designed and tested in the USA. Made in China.

美國設計及測試。中國製造。

Form No. 20033211-FAA  
©2024 Water Pik, Inc.