

**PHILIPS**




# Quick Start Guide

Always there to help you

The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.

This product has been manufactured by and is sold under the responsibility of Seasonal Specialties LLC, and Seasonal Specialties LLC is the warrantor in relation to this product.

## What's included

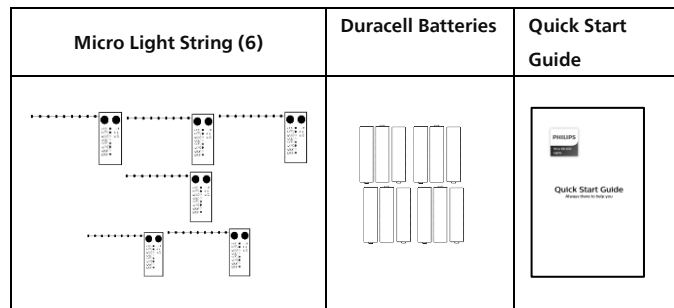

### What's next

- Read enclosed Safety Instruction Sheet before starting.
- Unwrap the lights and test before decorating.
- Decorate your home with the light string.

### Battery Installation and Operation:

This Product includes 12 "AA" 1.5V batteries. Use only with new Alkaline Batteries for best performance and longest operation.

- Carefully remove the product from its packaging.
- Make sure the light strings and wires are completely unraveled and positioned so it does not present a snagging or tripping hazard.
- Gently lift up the two tabs on side of battery case, and open the access door.
- Clean the battery contacts and also those of the device prior to battery installation.
- Insert 2 new "AA" batteries of the same brand matching the polarity shown inside the battery compartment.
- Close the cover and secure with the latching tabs.
- Press the Power Button to turn on the lights (see Button Operation section below for switch operation) and press the Function Button to cycle through the functions.
- Note: This product contains non-replaceable bulbs, do not attempt to replace bulbs.

### Button Operation:

Function Button		Power Button	
1. STEADY WHITE		1. TIMER	
2. STEADY MULTI		2. ON	
3. FLASH WHITE		3. OFF	
4. FLASH MULTI			
5. FADE WHITE			
6. FADE MULTI			
7. FLASH WHITE-MULTI			
8. FADE WHITE-MULTI			

### Power button:

To set the unit to Timer mode, press the Power Button until the set turns off, the next button press will turn on the Timer. It will light up for 6 hours when turned on, and then switch off for 18 hours to conserve battery power. The Timer function resets each time the light set is turned off using the Power Button.

### WARNING:

- This is a seasonal product not intended for permanent installation or use.
- For decoration only, not intended for use by children.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium or other types) batteries.
- Do not use rechargeable batteries in this product.
- Remove batteries from product during periods of non-use. Remove exhausted batteries from the light set immediately. Battery leakage can cause corrosion and damage to this product.
- Avoid short-circuiting the terminals of the batteries.
- Batteries should be inserted following the correct polarity markings on the product.
- Non-rechargeable batteries should not be recharged.
- Only batteries of the same or equivalent type as recommended shall be used. Replace only with "AA" type batteries.
- Dispose of batteries safely. Do not attempt to burn them. Use collection points where available. Follow directions on batteries.
- Make sure battery compartments are securely closed.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones or batteries of different types or brands.
- Retain these instructions for future reference.

#### Troubleshooting:

A. If the product does not work, please try the following steps:

- Press the Power Button several times to make sure they are in the Timer or On Modes. Cycle through the Function Button to select a different function.
- Unit may be in Timer mode and in the 18 hour off mode, press Power Button to turn off, and press the button again to select timer mode (This will be your selected start time. See Power Button section for more information.)
- Make sure all batteries are new, installed correctly and match the polarity indicated in the battery holder (if any are installed in reverse, the unit will not work).

B. If the lights do not come on when you want them to in the Timer mode:

- Make sure the product is in the "TIMER" position ("ON" will keep lights on until turned off). See Power Button section for operation.
- If switch is in a Timer position, please note that it only comes on for 6 hours and then is off for 18 hours and repeats at the time that you first turned it to "TIMER". To change timer start time, turn unit to off and then back to the "TIMER" position.
- It is normal for the automatic on and off times in the "TIMER" modes to vary slightly depending on changes in temperature and battery voltage.

C. If lights are dim or not all of the lights turn on:

- If lights are dim, replace batteries with a set of 2 new batteries.
- If not all lights turn on, or some are dimmer than others, it is time to install a set of 2 new batteries.
- If some colors don't light, replace with 2 new batteries.

#### Customer Service

Call Customer Care Monday - Friday 9:00 AM to 5:00 PM CST at 1-800-763-6177 (US and Canada), 001-855-218-8822 (Mexico), 1-800-947950 (Australia), 00798-14-800-0438 (Korea), 4001-200326 (China), or email us at [custserv@seasonalspecialties.com](mailto:custserv@seasonalspecialties.com).

Made In China / Fabriqué en Chine / Hecho en China

Distributed by:  
Costco Wholesale Corporation  
P.O. Box 34535  
Seattle, WA 98124-1535  
USA  
1-800-774-2678  
www.costco.com

Costco Wholesale Canada Ltd.\*  
415 W. Hunt Club Road  
Ottawa, Ontario  
K2E 1C5, Canada  
1-800-463-3783  
www.costco.ca  
\* faisant affaire au Québec sous  
le nom les Entrepôts Costco

Importado por:  
Importadora Primex S.A. de C.V.  
Blvd. Magnocentro No. 4  
San Fernando La Herradura  
Huixquilucan, Estado de México  
C.P. 52765  
RFC: IPR-930907-S70  
(55)-5246-5500  
www.costco.com.mx

Costco Wholesale Australia Pty Ltd  
17-21 Parramatta Road  
Lidcombe NSW 2141  
Australia  
www.costco.com.au

Costco Wholesale UK Ltd /  
Costco Online UK Ltd  
Hartspring Lane  
Watford, Herts  
WD25 8JS  
United Kingdom  
01923 213113  
www.costco.co.uk

Costco Wholesale Spain S.L.U.  
Polígono Empresarial Los Gavilanes  
C/ Agustín de Betancourt, 17  
28906 Getafe (Madrid) España  
NIF: B86509460  
900 111 155  
www.costco.es

Costco Wholesale Iceland ehf.  
Kauptún 3-7, 210 Gardabaer  
Iceland  
www.costco.is

Costco France  
1 avenue de Bréhat  
91140 Villebon-sur-Yvette  
France  
01 80 45 01 10  
www.costco.fr

Costco Wholesale Japan Ltd.  
2 Kakuchi, 2 Gaiku, Kaneda-Nishi  
361 Urikura, Kisarazu shi  
Chiba, 292-0007 Japan  
0570-200-800  
www.costco.co.jp

Costco Wholesale Korea, Ltd.  
40, Iljik-ro  
Gwangmyeong-si  
Gyeonggi-do, 14347, Korea  
1899-9900  
www.costco.co.kr

Costco Wholesale New Zealand Limited  
2 Gunton Drive  
Westgate, Auckland 0814  
New Zealand  
www.costco.co.nz

Costco (China) Investment Co., Ltd.  
Room 1003, Block 2, 2388 Xiupu Road,  
Pudong New Area, Shanghai  
China 201315  
+86-21-6257-7065

Costco Wholesale Sweden AB  
Box 614  
114 11 Stockholm  
Sweden  
www.costco.se

**PHILIPS**



# 快速入門指南

隨時為您提供協助

Philips 商標及 Philips 盾型徽章均為 Koninklijke Philips N.V.的註冊商標，並在獲許可下使用。


本產品由 Seasonal Specialties LLC 製造及負責銷售，同時 Seasonal Specialties LLC 為本產品提供保養服務。

型號: 1601274

2024

第 1 頁，共 8 頁

## 包裝內含

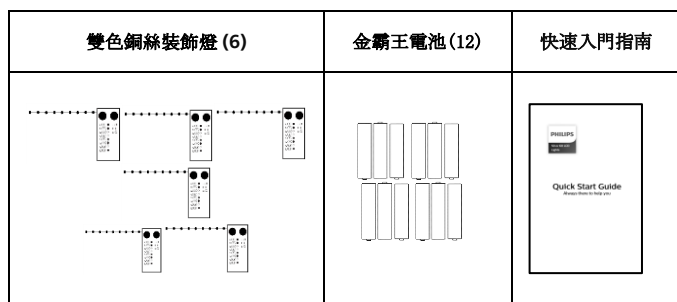

### 操作步驟

- 使用前，請先閱讀包裝內隨附的安全說明。
- 拆除燈泡包裝，並在裝飾前先測試燈泡。
- 使用燈串裝飾你的家居。

### 安裝電池及操作：

本產品包含 12 顆 AA 1.5V 電池。本產品需使用 2 顆「AA」1.5V 電池（需另行購買）。請僅使用全新的鹼性電池，以達到最佳效能和最持久的操作時間。

- 小心地拆除包裝以取出產品。
- 確保徹底拆解及妥善放好燈串及電線，以免造成纏繞或絆倒風險。
- 輕輕提起電池盒側面的兩個卡扣，並打開電池蓋。
- 安裝電池前，先清潔電池及裝置的接觸點。
- 按照電池盒的正負極指示，安裝 2 顆相同品牌的全新「AA」電池。
- 關上電池蓋，並以卡扣鎖緊。
- 按下電源按鈕以開啟燈泡（有關切換操作，請見下文「按鈕操作」部分），並按下「功能」按鈕以循環切換各項功能。
- 註：本產品含有不可更換的燈泡，請勿嘗試更換燈泡。

### 按鈕操作：

功能按鈕		電源按鈕	
1. 長亮白色燈		1. TIMER (計時器)	
2. 長亮多色燈		2. ON (開啟)	
3. 閃動白色燈		3. OFF (關閉)	
4. 閃動多色燈			
5. 漸變白色燈			
6. 漸變多色燈			
7. 閃動白燈-多色燈			
8. 暗淡白燈-多色燈			

### 電源按鈕：

如要將裝置設為「計時器」模式，請按下「電源按鈕」直至燈泡組熄滅為止，再次按下按鈕便能啟動「計時器」。「計時器」啟動時，裝置會亮著 6 小時，然後關閉 18 小時以節省電池電量。每次使用「電源按鈕」關閉燈泡組時，「計時器」的功能便會重置。

### 警告：

- **本季節性產品不適合永久安裝或使用。**
- 僅作裝飾用途，不適合兒童使用。
- 請勿將新舊電池混合使用。
- 請勿將鹼性電池、標準（碳鋅）或充電電池（鎳鎘或其他類型）混合使用。
- 本產品不可使用充電電池。
- 不使用期間，請移除產品中的電池。如電池耗盡，應立即從產品中移除。電池洩漏可能會導致腐蝕並損壞本產品。
- 避免令電池終端短路。
- 應按照產品上的正負極標記正確安裝電池。
- 不應為非充電電池充電。
- 僅可使用建議下的相同或同等類型電池，並僅可更換「AA」型電池。
- 應安全地處置電池。請勿嘗試燃燒電池。應使用收集點（如有）及按照電池上的指示來處置電池。
- 確保電池盒已緊閉。
- 請在同一時間更換整套電池。注意不要將新和舊，又或不同類型或品牌的電池混合。
- 保留說明書以供日後參考。

### 疑難排解：

A. 如產品無法運作，請嘗試以下步驟：

- 按下「電源按鈕」幾次，確保其處於「計時器」或「開啟」模式。按下「功能按鈕」以循環選擇不同功能。
- 裝置可能處於「計時器」模式中的 18 小時關閉狀態。請按下「電源按鈕」將裝置關閉，然後再次按下按鈕以選擇「計時器」模式（這將是你所選擇的開始時間。請見「電源按鈕」部分以了解更多資訊）。
- 確保所有電池均為新電池，正確安裝及符合電池盒所標示的正負極（如有電池以相反的極性安裝，裝置便無法運作）。

B. 如你希望燈泡在「計時器」模式中發亮，但卻無法成功：

- 確保產品正處於「計時器」位置（「ON」會保持亮起，直至關閉為止）。請見「電源按鈕」部分以了解操作。
- 如關閉正處於「計時器」位置，請留意燈泡僅會亮著 6 小時，然後會關閉 18 小時，並在你首次切成「計時器」時重覆以上操作。如要更改計時器的開始時間，請關閉裝置，然後返回「計時器」位置。
- 一般情況下，視溫度和電池電壓的變化，在「計時器」模式下自動開啟和關閉的時間會稍有不同。

C. 如燈光暗淡或只有部分燈泡開啟：

- 如燈光暗淡，請更換以 2 顆為一組的新電池。
- 如只有部分燈泡開啟，或部分燈泡比其他燈泡暗淡，即表示需要安裝以 2 顆為一組的新電池。
- 如部分顏色燈光沒有亮起，請更換 2 顆新電池。

## 客戶服務

如有需要，請於星期一至星期五上午 9 時至下午 5 時（中部標準時間），致電 1-800-763-6177（美國及加拿大）、001-855-218-8822（墨西哥）、1-800-947950（澳洲）、00798-14-800-0438（韓國）、4001-200326（中國），或電郵至 [custserv@seasonalspecialties.com](mailto:custserv@seasonalspecialties.com) 聯絡我們的客戶服務部。

此頁特意留白。

Made in China / 中國製造

Distributed by:  
Costco Wholesale Corporation  
P.O. Box 34535  
Seattle, WA 98124-1535  
USA  
1-800-774-2678  
www.costco.com

Costco Wholesale Canada Ltd.\*  
415 W. Hunt Club Road  
Ottawa, Ontario  
K2E 1C5, Canada  
1-800-463-3783  
www.costco.ca

\* faisant affaire au Québec sous  
le nom les Entrepôts Costco

Importado por:  
Importadora Primex S.A. de C.V.  
Blvd. Magnocentro No. 4  
San Fernando La Herradura  
Huixquilucan, Estado de México  
C.P. 52765  
RFC: IPR-930907-S70  
(55)-5246-5500  
www.costco.com.mx

Costco Wholesale Australia Pty Ltd  
17-21 Parramatta Road  
Lidcombe NSW 2141  
Australia  
www.costco.com.au

Costco Wholesale UK Ltd /  
Costco Online UK Ltd  
Hartspring Lane  
Watford, Herts  
WD25 8JS  
United Kingdom  
01923 213113  
www.costco.co.uk

Costco Wholesale Spain S.L.U.  
Polígono Empresarial Los Gavilanes  
C/ Agustín de Betancourt, 17  
28906 Getafe (Madrid) España  
NIF: B86509460  
900 111 155  
www.costco.es

Costco Wholesale Iceland ehf.  
Kauptún 3-7, 210 Gardabaer  
Iceland  
www.costco.is

Costco France  
1 avenue de Bréhat  
91140 Villebon-sur-Yvette  
France  
01 80 45 01 10  
www.costco.fr

Costco Wholesale Japan Ltd.  
2 Kakuchi, 2 Gaiku, Kaneda-Nishi  
361 Urikura, Kisarazu shi  
Chiba, 292-0007 Japan  
0570-200-800  
www.costco.co.jp

Costco Wholesale Korea, Ltd.  
40, Iljik-ro  
Gwangmyeong-si  
Gyeonggi-do, 14347, Korea  
1899-9900  
www.costco.co.kr

Costco Wholesale New Zealand Limited  
2 Gunton Drive  
Westgate, Auckland 0814  
New Zealand  
www.costco.co.nz

開市客（中國）投資有限公司  
中國上海市浦東新區秀浦路2388號2幢1003  
室，郵編：201315  
+86-21-6257-7065

Costco Wholesale Sweden AB  
Box 614  
114 11 Stockholm  
Sweden  
www.costco.se