

ANIMATED SKI MOUNTAIN WITH LIGHTS AND MUSIC

ITM. / ART. 1784987

Product Manual

✉ customerservice@natures-mark.com



1-877-378-3150 (8 a.m. – 5 p.m., PST, Monday - Friday. English only.)


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

- Carefully remove the product and accessories from package. Keep packaging for safe storage.
- Place the product on a flat, stable surface close to a power source. The area surrounding the item should be clear of any obstructions.
- Plug one end of the adapter into the DC jack located at the back of item, and the other end into an electrical outlet.
- The product is operated by the two-way switch at the back of item. Slide the switch to '⌚' timer position, to activate lights, music and animation, and turn the switch to 'o' position to turn off product.
- '⌚' Timer: 6 H On / 18 H Off
- Rotate the dial to adjust the volume of the music.

TROUBLESHOOTING:

If the product is not functioning, check for the following problems:

- The switch is in 'o' position.
- The power source is disabled or the cord may be unplugged.
- The moving mechanism may be blocked by debris or an obstruction.

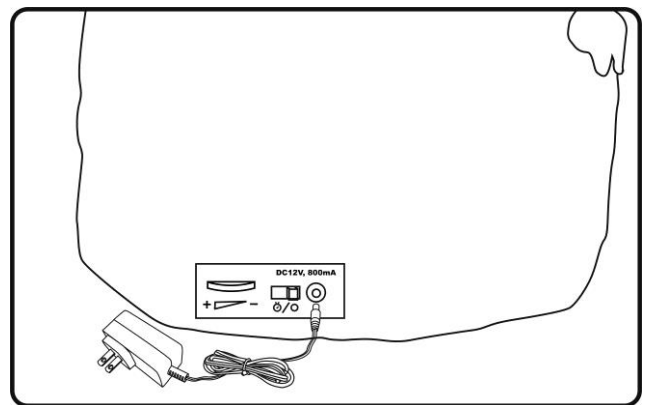

CAUTION:

- When not in use and being packed away, please unplug adapter from DC jack.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

WARNING:

- This is an electrical product! To avoid risk of fire, burns, personal injury, and electric shock, close supervision is necessary when the product is used by or near children.
- This is not a toy. For decorative indoor use only.
- Only adapters of same or equivalent type are recommended.
- This seasonal use product is not intended for permanent installation or use.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended for an extended period.
- Do not restrict the movement of any revolving component to avoid damage.
- Do not use this product for other than its intended use.
- Do not use an extension cord unless the plug can be fully inserted.
- Do not alter or replace the plug.
- When not in use, store neatly in a cool, dry location protected from sunlight.
- Do not connect the chain to the supply while in packaging.
- For decoration purposes only.
- The light source is not intended for use in other applications.
- Read and follow all instructions that are on the product or provided with the product.
- The minimum clearance distance from the top and sides of the control gear to normally flammable building elements is 75mm.

LED 冬日滑雪村裝飾

品項/商品編號 1784987

使用說明

✉ customerservice@natures-mark.com



1-877-378-3150 (星期一至星期五, 太平洋標準時間, 上午8點至下午5點, 僅支援英語。)

內含重要事項, 請保留此份說明以供日後參考: 請詳閱。

- 小心地將產品及配件由包材中取出。請保留包材以便收納時產品能受妥善保護。
- 本產品請置於平穩的表面並靠近電源處。放置產品的周遭區域應清空不可放置其他物品。
- 將變壓器的一端插入產品背面的 DC 插孔, 而另一端插入電源插座中。
- 產品開關設置於產品背面。開關推至 'O' 定時開關時, 可啟動燈光、音樂、動作; 將開關推至 'O' 來關閉本產品。
- 旋鈕可調整音樂的音量大小。
- “O” 定時器: 6 小時開 / 18 小時關


疑難排解:

若無法啟動產品各項功能, 請檢查是否有以下的問題:

- 開關設定在 'O' 的位置。
- 電源中斷或是電源線未插入電源插座內。

注意:

- 當產品不使用或打包存放時, 請將變壓器接頭由 DC 插孔中拔出。
- 本產品的燈泡無法更換, 當燈泡達到使用壽命時, 應更換整個產品。

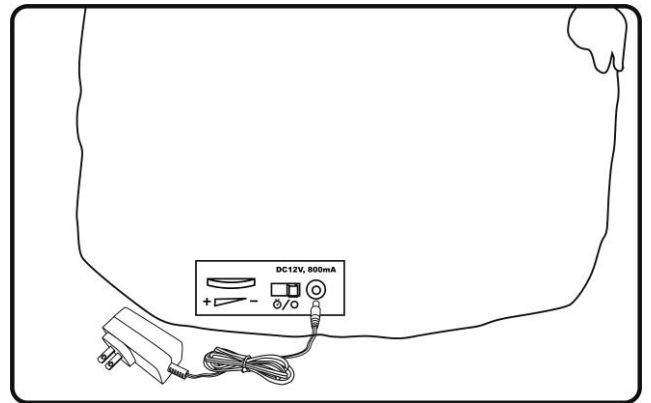

警告:

- 本產品為電子商品! 在靠近孩童身旁使用操作時, 需要密切留意使用狀況以避免起火、燃燒、人員受傷及觸電的危險發生。
- 本產品並非玩具。僅供室內裝飾使用。
- 建議只使用產品所附或是同等規格的變壓器。
- 本產品為季節性商品並非供作永久安裝或使用的設備。
- 外出時、晚上睡覺前或是可能長時間無人在家時, 請拔除本產品的電源插頭。
- 為避免損壞, 請勿限制本產品旋轉裝置的運作。
- 本產品之使用切勿超過原先所設計之使用範圍。
- 請勿使用延長線除非插頭可以完全的插入。
- 請勿變更或更換插頭。
- 當不使用時, 請將產品適當的存放於涼爽、乾燥避免陽光照射的地方。
- 當產品還在包裝裏面時, 不要將插頭連接電源。
- 僅供裝飾使用。
- 此光源不供其他電器產品使用。
- 請詳閱並確實的遵守在產品上或是產品所附的指示說明。
- 從適配器頂部和側面到易燃材料的最小安全距離為 75 毫米。

Distributed by:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com

Costco Wholesale UK Ltd /
Costco Online UK Ltd
Hartspring Lane
Watford, Herts
WD25 8JS
United Kingdom
01923 213113
www.costco.co.uk

Costco Wholesale Japan Ltd.
2 Kakuchi, 2 Gaiku, Kaneda-Nishi
361 Urakura, Kisarazu shi
Chiba, 292-0007 Japan
0570-200-800
www.costco.co.jp

Costco Wholesale Canada Ltd.*
415 W. Hunt Club Road
Ottawa, Ontario
K2E 1C5, Canada
1-800-463-3783
www.costco.ca
* faisant affaire au Québec sous
le nom les Entrepôts Costco

Costco Wholesale Spain S.L.U.
Polígono Empresarial Los Gavilanes
C/ Agustín de Betancourt, 17
28906 Getafe (Madrid) España
NIF : B86509460
900 111 155
www.costco.es

Costco Wholesale Korea, Ltd.
40, Ilijk-ro
Gwangmyeong-si
Gyeonggi-do, 14347, Korea
1899-9900
www.costco.co.kr

Importado por:
Importadora Primex S.A. de C.V.
Blvd. Magnocentro No. 4
San Fernando La Herradura
Huixquilucan, Estado de México
C.P. 52765
RFC: IPR-930907-S70
(55)-5246-5500
www.costco.com.mx

Costco Wholesale Iceland ehf.
Kauptún 3-7, 210 Gardabaer
Iceland
www.costco.is

Costco Wholesale New Zealand Limited
2 Gunton Drive
Westgate
Auckland 0814
New Zealand
www.costco.co.nz

Costco Wholesale Australia Pty Ltd
17-21 Parramatta Road
Lidcombe NSW 2141
Australia
www.costco.com.au

Costco France
1 avenue de Bréhat
91140 Villebon-sur-Yvette
France
01 80 45 01 10
www.costco.fr

Costco (China) Investment Co., Ltd.
Room 01 Mezzanine, No. 5178
Kang Xin Highway, Pudong New District
Shanghai, China 201315
+86-21-6257-7065

Costco Wholesale Sweden AB
Box 614
114 11 Stockholm
Sweden
www.costco.se



MADE IN CHINA
FABRIQUÉ EN CHINE
HECHO EN CHINA

中國製
제조국: 중국
中國製