



CR2032
3V

注意！電池安全提示：
本產品包含一顆鈕扣電池。
如果不慎誤吞食，可能在兩
個小時內就造成嚴重損傷
或死亡。請立即就醫。

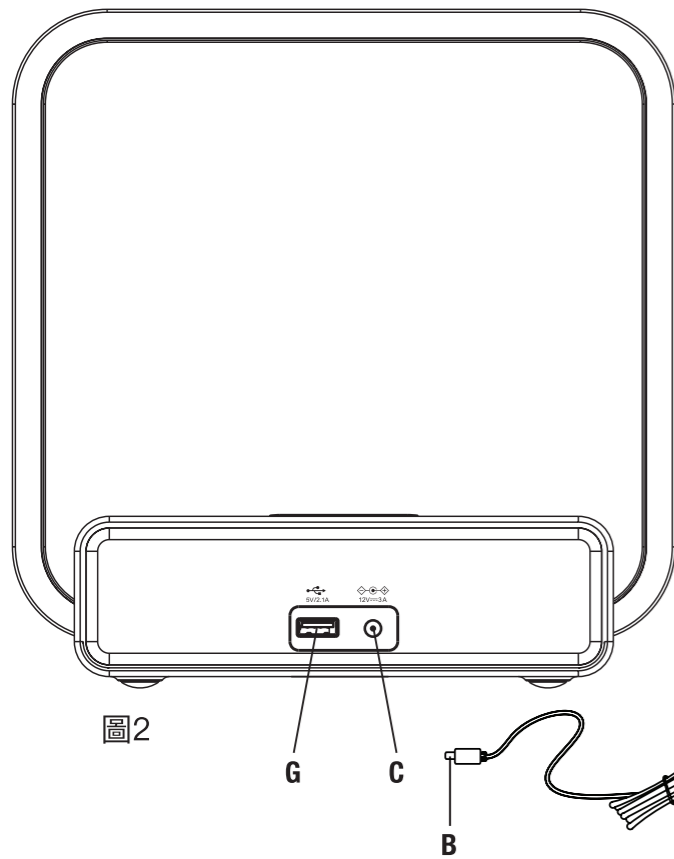
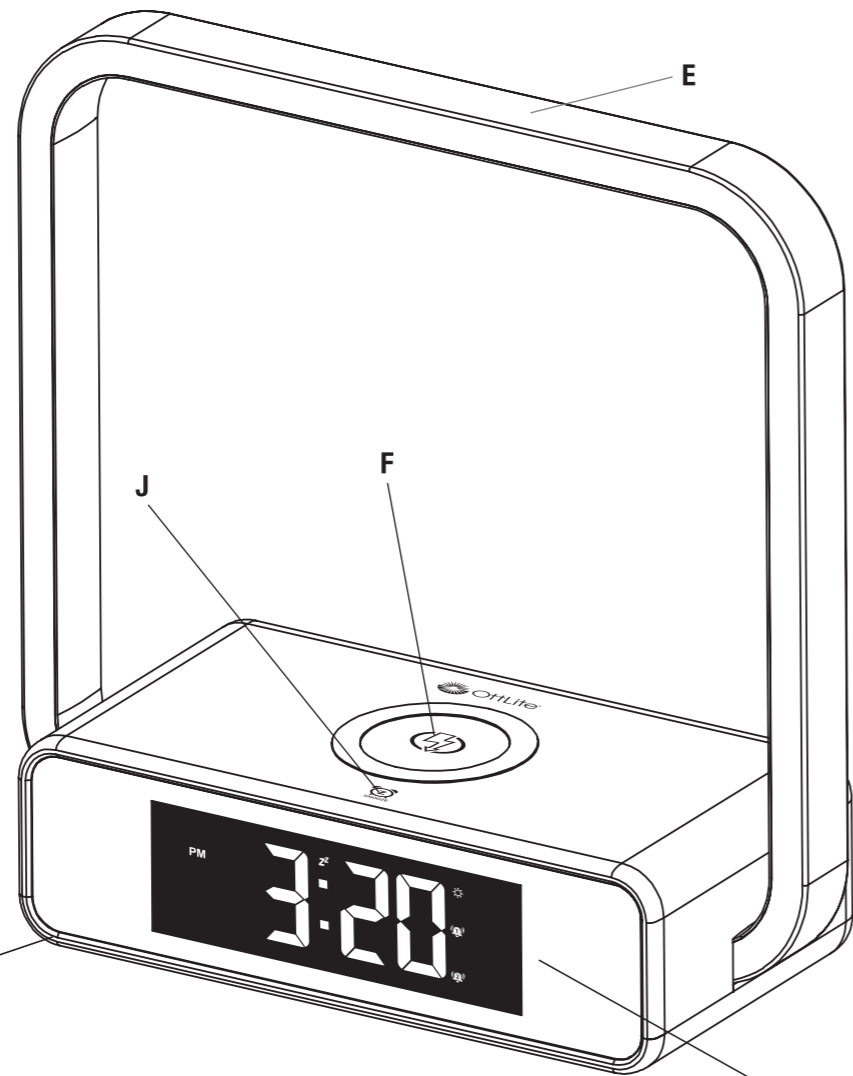


圖2

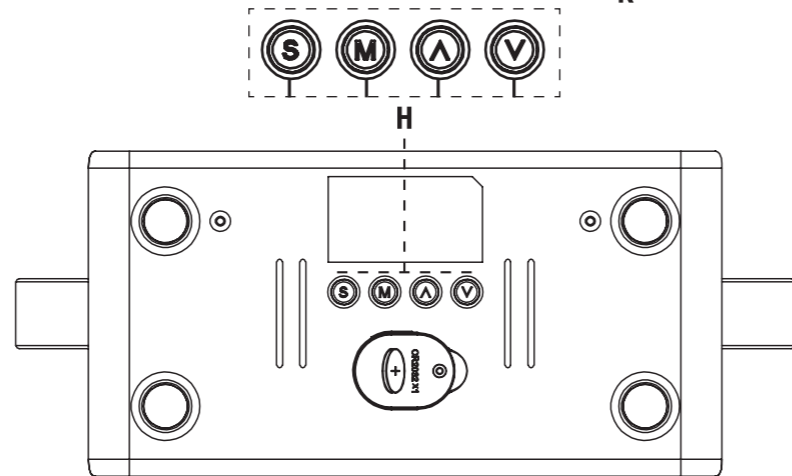


圖3

無線充電功能、喚醒燈和夜燈的鬧鐘

AQ100Z-TW

中文

恭喜！您選購的全新OttLite® 產品是自然光技術的最佳產品。

警告：為防止觸電，請務必確保在所有組裝步驟完成後再連接電源。

提示：本品已全部組裝完成。

將產品從包裝中取出，然後將底座 (A) 放在平穩的表面上。

將電源適配器輸入端 (B) 插入產品後面底部的連接器 (C) 中。

將電源適配器 (D) 插入標準家用插座。 **注意：**僅限使用隨附的電
源適配器，避免損壞或引起火災。

當產品首次插入電源並通電時，綠色指示燈 (K) 將立即亮起，並發
出嗶嗶聲，表明已正確接電。

燈框 (E) 是“觸摸”開關，用於控制開/關電源和設置 3 個亮度級
別。 觸摸框架上的任意位置即可啟動。

無線充電器 (F) 位於底座 (A) 的中心位置。 有關詳細資訊，請參
閱“無線充電說明”部分。

控制板 (H) 圖標說明

S (設定) 按鈕 — 用於設定時間。

M (模式) 按鈕—按下即可設定鬧鐘和小睡

▲ (向上) 按鈕 — 在設定模式下，按下 ▲ 即可增加

▼ (向下) 按鈕 — 在設定模式下，按下 ▼ 即可減少

注意：按下鬧鐘前端可啟動小睡按鈕 (J)。 此操作會啟動鬧鐘前端
兩個橡膠墊腳下方的一個或兩個按鈕。 一個或兩個按鈕均可啟動。
小睡按鈕並非觸摸式開關。

注意：用於設定時鐘和警報的控制板 (H) 位於燈體 (A) 下方。

鬧鐘設置：

- 要設定時間，請按住 S 按鈕 3 秒，直至“小時”閃爍。 然後觸摸
“▲”鍵和“▼”鍵即可調整“小時”，然後再次觸摸 S 鍵以設定“分
鐘”。 再次觸摸 S 鍵即可退出時鐘設定模式，如果無操作，將會自
動退出到正常模式。

- 當處於非設定模式時，按 S 鍵可在“12h”和“24h”顯示之間切換。

鬧鐘和貪睡功能設定：

- 本產品可設置兩組鬧鐘，在時鐘面板中分別顯示為 (⌚) 和 (⌚)。
要設定鬧鐘時間，請按住 M 按鈕 3 秒，直至“小時”閃爍，以啟動
鬧鐘設定模式。 再次按下 M 按鈕即可進行其他設定。 設定順序
為：小時-分鐘-喚醒燈光模式。 鬧鐘1和鬧鐘2均遵循上述設定順
序，鬧鐘1設置完成后重複上述設定順序即可設置鬧鐘2。 再次按
下 M 按鈕即可退出設定，如果無操作，將會自動退出到正常模式。

- 當設定喚醒燈模式時，按下“▲”或“▼”按鈕可從“-OFF”切換
到“ON”。“ON”表示喚醒燈模式已啟用，並將在鬧鈴設定時間前
10 分鐘打開。

- 要開啟和關閉鬧鐘，請按住“小睡按鈕”3 秒鐘即可。 鬧鐘開啟
後，將顯示 (⌚)。如果喚醒燈模式已啟用，(☀) 也將顯示。 兩組
鬧鐘的開關順序為：鬧鐘1 — 鬧鐘2 — 鬧鐘1和鬧鐘2 — 關閉。

- 鬧鈴聲響起後，按“小睡按鈕”即可進入小睡模式，時鐘顯示螢幕
上將出現“z”圖標。 小睡模式將持續 10 分鐘。 如果在 10 分鐘
內未按下“小睡按鈕”，鬧鈴將自動關閉。

- 按住 小睡按鈕 3 秒鐘即可退出小睡和鬧鈴模式。 當不在小睡和
鬧鈴模式時，(z)、(☀) 和 (⌚) 符號將消失。

- 調整鬧鐘顯示亮度：
要調整鬧鐘顯示亮度，請按“小睡按鈕”。
有 4 種亮度可調：L3、L2、L1、關閉。

- 無線充電說明：
無線充電只能給兼容無線充電的設備充電。 要對設備進行無線充
電，請執行以下操作：

- 將支持無線充電的設備正面朝上放置在無線充電區域 (F) 的中心

無線充電功能、喚醒燈和夜燈的鬧鐘

位置。 僅可在設備保持水平和垂直位置時為其充電。

- 當將設備放於無線充電區域 (F) 的中心位置後，紅燈 (K) 將常亮
起，表示充電模式已激活。 您的設備應該顯示充電中。

- 如紅燈 (K) 閃爍，表示設備未正確充電。 此時請確保設備正確居中。

- 定期檢查設備的充電狀態，以確定設備何時充滿電。

注意：產品不提供任何設備何時充滿電的提醒。

小心！ 設備在充電過程中可能會變熱。 這是充電過
程中的正常現象。 充電時間因設備而有所不同。

更換電池

- 本燈使用 CR2032 電池。 有關電池更換，請參見圖 3。 電池盒在
燈體 (A) 下方。

- 拆卸/安裝鈕扣電池：用螺絲刀拆下螺釘，然後拆下燈背面燈體部分
(a) 下部的電池盒蓋。 逆時針和逆時針轉動螺釘即可將其拆下和
安裝。 安裝鈕扣電池時應使“+”或平面向上。

安全警告：

- 小心：請勿吞食電池，有化學灼傷危險。

- 本檯燈包含一顆鈕扣電池。如果不慎吞食鈕扣電池，只需兩小時即
可能造成嚴重體內損傷，甚至可能導致死亡。

- 請勿讓孩童接觸到新舊電池。

- 如果電池盒沒有關緊，請停止使用本品，請勿讓孩童接觸。

- 若您認為電池可能已經不慎誤吞或放入體內，請立即求醫。

注意：鈕扣電池體積小，單顆電池的直徑大於高度。

電池處置：電池處置應當符合當地有關危險材料處置的法規。請勿
焚燒。

安全警告：降低給人們造成的燒傷、火災、觸電 或受傷風險

關閉產品，等待適配器冷卻後再進行處理。

除非插頭可以完全插入延長插線板中，否則請勿使用延長線。

請勿改造插頭。

使用者不可更換本設備隨附的燈組件。

僅供室內使用

注意：本說明書中出現的重要安全說明，並不包含所有可能發生的情
況。 請務必理解，使用所有電器產品時都須小心。

注意！ 如果本燈具的外部軟電纜或電線損壞，則應僅
能由製造商或其服務代理商或類似的專業人士更換，以避
免危險。 僅供室內使用。

僅可使用提供的電源適配器，從而避免損壞或引發火災。

**本燈具的燈源不可更換；燈源達到其使用壽命後，應整體更換
燈具。**

小心：未經OttLite Technologies明確認可的任何更改或改
造，OttLite概不對產品的正常功能負責。

電源適配器規格：

輸入：AC 100–240V~, 50/60 Hz, 0.9A

輸出：12V DC, 3.0A, 公頭直流插頭

無線充電器規格：

輸出：最高 15 瓦，具體取決於設備。

本產品的背面底部有一個 5V、2.1A 的 USB 輸出端口 (G)。此 USB
端口可用於為平板電腦、手機等設備充電。



CR2032
3V

CAUTION!

BATTERY SAFETY:

This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.

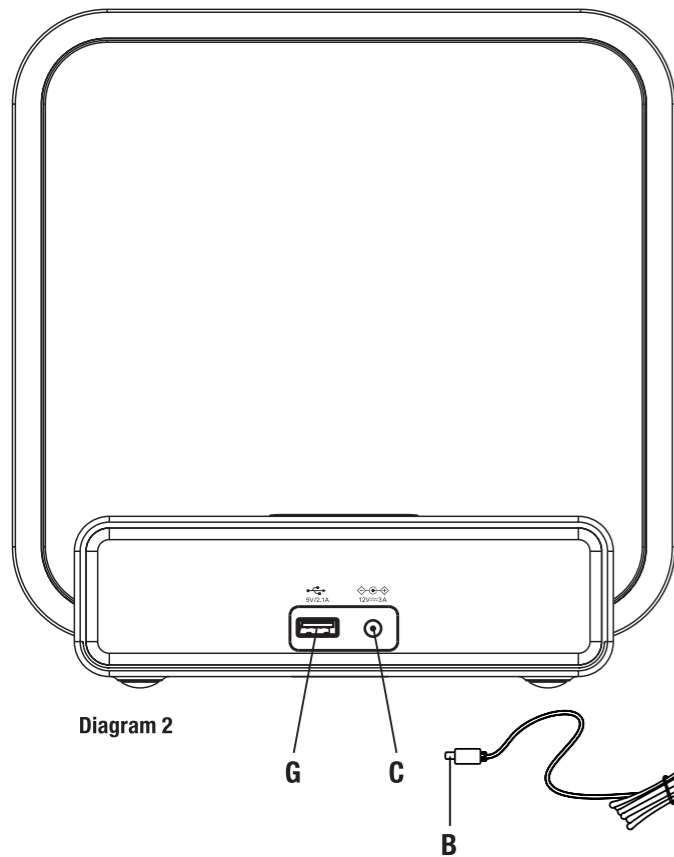
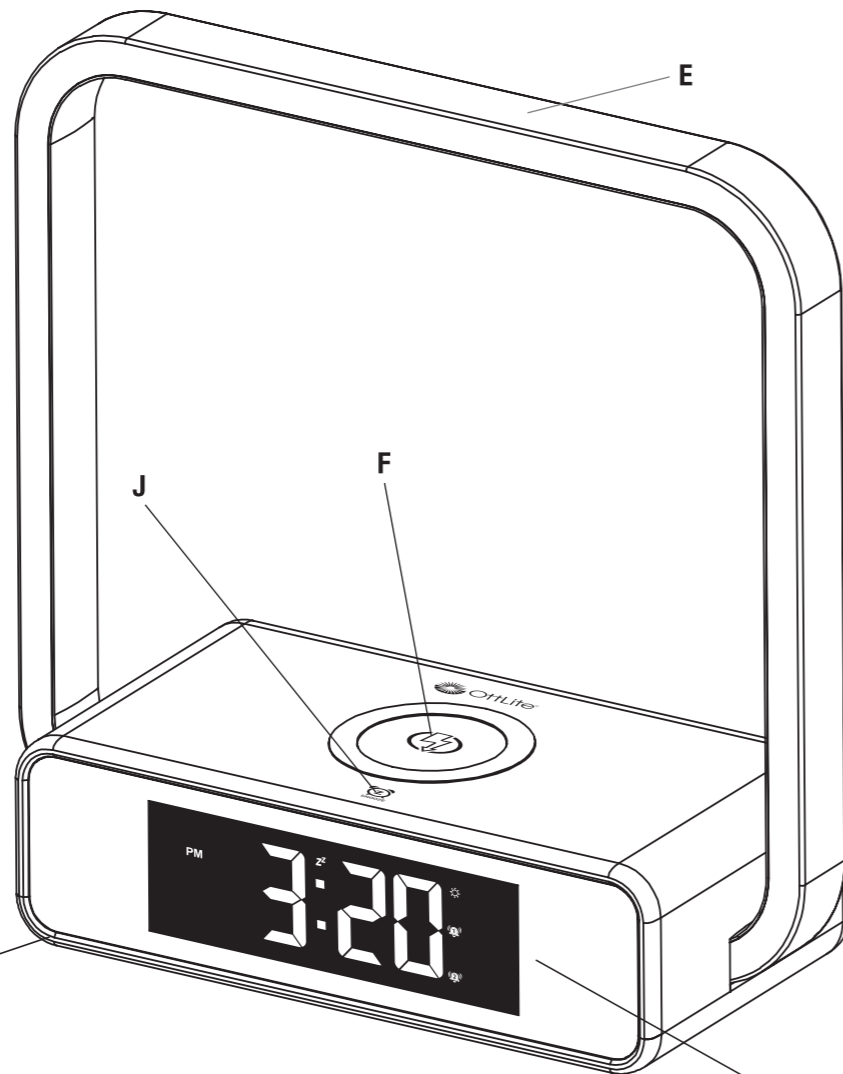


Diagram 2

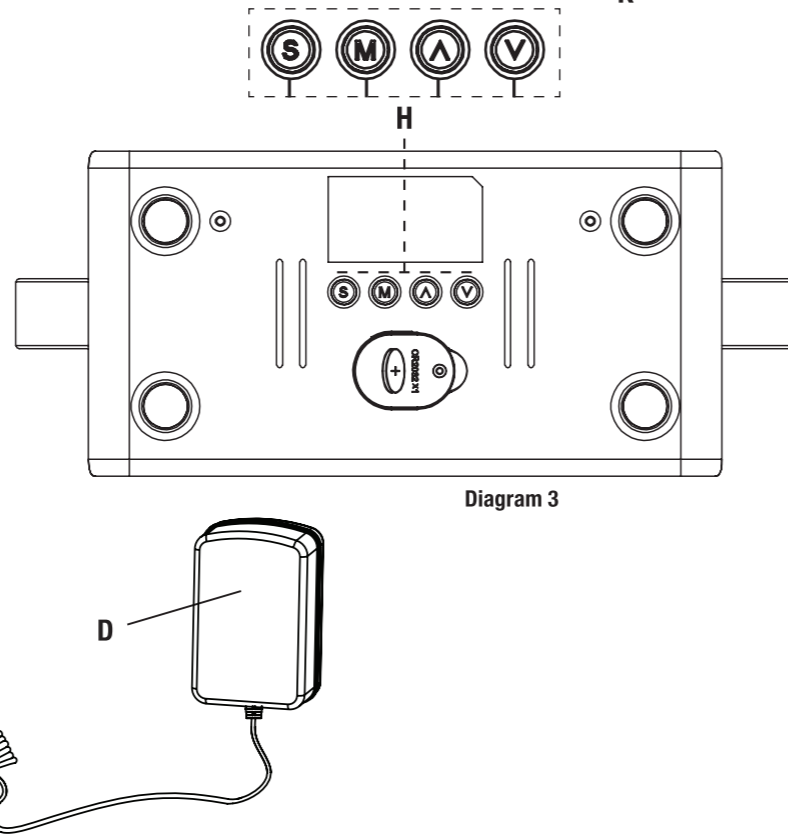


Diagram 3

ENGLISH

Alarm Clock with Wireless Charging, Wake Up Light and Night Light

CONGRATULATIONS! You've purchased the finest in natural lighting technology with your new OttLite® product.

WARNING: To prevent electric shock, make sure the product is not plugged in until all steps are complete.

NOTE: THIS UNIT IS FULLY ASSEMBLED

Remove product from packing, placing base (A) flat on a steady surface. Connect power adapter input (B) into connector (C) in the rear-bottom of the product. Plug the power adapter (D) into a standard household outlet. **NOTE: Only use with the supplied power adapter to avoid damage or fire.**

When the product is first plugged in and receives power, a green light (K) will illuminate momentarily along with an audible beep, indicating that a proper electrical connection has been made.

Light frame (E) is a "touch" switch that controls ON/OFF power and the 3 brightness level settings. Touch anywhere on the frame to activate.

Wireless charger (F) is located in the center of base (A). See Wireless Charging Instructions section for details.

CONTROL PANEL (H) icon legend

- S** (setting) button – to set time.
- M** (mode) button – push to set alarm and snooze.
- ^** (up) button – In setting mode, push **^** to increase.
- v** (down) button – In setting mode, push **v** to decrease.

NOTE: Snooze Button (J) is actuated by pressing down on front end of clock. Doing this actuates one or two buttons located under the front two feet rubber feet. One or both buttons is sufficient for actuation. The Snooze Button is not a touch switch.

NOTE: Control Panel (H) to set Clock and Alarm is located underneath lamp body (A).

CLOCK SETTING:

- To set time, press and hold **S** button for 3 seconds until the "hour" flickers. Then touch **^** key and **v** key to adjust "hour," then touch **S** key again to set the "minute". Hit **S** again to exit clock setting mode or it will automatically quit to normal mode if idle.
- When not in setting mode, press **S** key to switch between "12h" and "24h" display.

ALARM & SNOOZE FUNCTION SETTING:

- Two alarms can be set as indicated by and . To set the alarm time, press and hold **M** button for 3 seconds until the "hour" flickers to activate alarm setting mode. Press **M** button again for next setting. The sequence of setting is: Hour – Minute – Wakeup Light Mode. The sequence will occur for Alarm 1 and then repeat for Alarm 2. Press **M** button again to quit setting, or it will automatically quit to normal mode if idle.
- When setting Wakeup Light Mode, press **^** or **v** button to switch from "OFF" to "ON". "ON" indicates the Wakeup Light Mode is enabled and will turn on 10 minutes before the alarm set time.
- To turn alarm ON and OFF, press and hold "SNOOZE BUTTON" for 3 seconds. will display when the alarm is ON. If the wake up light mode was enabled, the will also display. The sequence is: Alarm 1 – Alarm 2 – Alarms 1 and 2 – Off.
- When alarm sounds, press "SNOOZE BUTTON" to enter Snooze Mode and a **zz** icon will appear on the clock display. Snooze Mode will occur for 10 minutes. If "SNOOZE BUTTON" is not pressed within 10 minutes, the alarm will automatically shut off.
- Press and Hold "SNOOZE BUTTON" for 3 seconds to exit Snooze and Alarm Mode. When out of Snooze and Alarm Mode, the **zz**, , and symbol will disappear.

ADJUST CLOCK DISPLAY BRIGHTNESS:

- To adjust the clock display brightness, press "SNOOZE BUTTON".
- There are 4 settings: L3, L2, L1, OFF.

WIRELESS CHARGING INSTRUCTIONS:

Wireless charging requires a device that is wireless charging compatible. To wirelessly charge a device, perform the following:

- Place the device, which supports wireless charging, face up on the middle of the wireless charging area (F). The device will charge both in the horizontal and vertical position.
- When the device is centered on the wireless charging area (F), a solid RED light (K) will come on noting charging mode is active. Your device should show charging is taking place.

- A flashing RED Light (K) will indicate the device is not properly charging. Make sure the device is properly centered.
- Check the charge level on your device periodically to determine when device is fully charged. **NOTE:** Product DOES NOT provide any indication of when device is fully charged.

CAUTION! DEVICE MAY BECOME WARM DURING CHARGING. THIS IS NORMAL AND PART OF THE PROCESS. CHARGING TIMES VARY BY DEVICE.

BATTERY REPLACEMENT:

- This lamp uses a CR2032 battery. For battery replacement see **diagram 3**. Battery compartment is located underneath lamp body (A).
- To remove/install button cell battery: use a screwdriver to remove screw, then remove battery compartment door located in the lower part of lamp body section (A) on back-side of lamp. Turn screw counter clock-wise to remove and clock-wise to install. Button cell battery is to be installed with the "+" or flat side facing upward.

SAFETY WARNING:

- CAUTION: DO NOT INGEST BATTERY; CHEMICAL BURN HAZARD!**
- This lamp contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just two hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- NOTE:** Coin/button cell batteries are small, single cell devices having a diameter greater than their height.

BATTERY DISPOSAL: battery disposal should be in compliance with local regulations pertaining to the disposal of hazardous materials. **DO NOT INCINERATE.**

SAFETY WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

Turn product off and **WAIT UNTIL ADAPTER IS COOL** before handling. Never use with an extension cord unless the plug can be fully inserted into the receptacles in the extension cord. Do not alter the plug. The light assembly included with this unit cannot be replaced by the consumer. **INDOOR USE ONLY.**

NOTE: The important safety instructions appearing in this instruction sheet are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care must be used with any electrical product.

CAUTION! IF THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS LUMINAIRE IS DAMAGED, IT SHALL BE EXCLUSIVELY REPLACED BY THE MANUFACTURER OR ITS SERVICE AGENT OR A SIMILAR QUALIFIED PERSON IN ORDER TO AVOID A HAZARD. **INDOOR USE ONLY.**

ONLY USE WITH THE SUPPLIED POWER ADAPTER TO AVOID DAMAGE OR FIRE.

THE LIGHT SOURCE OF THIS LUMINAIRE IS NOT REPLACEABLE; WHEN THE LIGHT SOURCE REACHES ITS END OF LIFE THE WHOLE LUMINAIRE SHALL BE REPLACED.

CAUTION: Any change or modification to product not expressly recognized by OttLite Technologies voids OttLite's responsibility for proper function of product.

POWER ADAPTER SPECIFICATION:

Input: 100-240 V~, 50/60 Hz, 0.9A
Output: 12V 3.0A with a Male DC Plug

WIRELESS CHARGER SPECIFICATION:

Output: up to 15 watts depending on device.

THIS PRODUCT CONTAINS A 5V, 2.1A USB output port (G) located on the bottom rear of product. USB port can charge items such as tablets, cellular phones, etc.

Alarm Clock with Wireless Charging, Wake Up Light and Night Light

AQ100Z-TW

B18AQ15