

ITM./ART. 1456761

1.3 m / 4.5 ft Entrance Tree Model: 00099CWTW

重要安全須知

使用產品前需閱讀並遵循以下安全說明

- 此產品為電子產品，非玩具。為避免電擊、火災及人員傷害，必須放置在兒童不能接觸的環境且不被當作玩具使用。
- 此產品使用LED燈泡，燈腳須保持直立，避免交叉造成產品損壞。

- 此季節性產品非供長時間使用及永久固定安裝，
- 請勿安裝產品於接近電熱器、壁爐、蠟燭、瓦斯氣體等類似熱源的環境。
- 請勿將燈泡放置在電線上。
- 當長時間不使用或人員外出無法注意產品時，請移除插頭電源。
- 請勿使用釘書針、鐵釘或其他帶銳利邊角的掛鉤來固定電線。

- 請勿在不正常情況的條件下使用此產品。
- 請勿懸掛裝飾物或其他物件於產品電線上。
- 請勿將產品電線或延長線置於門邊或窗戶，避免夾傷破壞電線絕緣。
- 當產品使用時，請勿覆蓋任何非產品本身提供物件，如衣物或紙張等。
- 請閱讀並遵守產品上或連同產品提供的所有說明使用。

請保存此說明書



使用說明

- 當產品放置於樹上時，植物必須妥善照護。勿放置產品在發黃或變黑的針葉上。植物花盆須保持充滿。
- 當產品放置於樹上時，樹必須固定並保持平穩。
- 使用或再次安裝本產品前，需仔細檢查產品狀態。若發現電線損傷、斷裂、外皮磨損；燈座或外殼破裂；及任何電氣連接喪失，導致導體外露情況，請終止使用產品。
- 移除商品欲保存時，請小心地從安裝處取下，請勿大力拉扯以免損傷產品導體、電線及電氣連接處。
- 不使用時，保存產品於乾燥陰涼環境中，並避免陽光直接照射。

警告：避免火災危險，LED內無燈泡旁路裝置，不能讓燈串在燈泡不亮時繼續工作。請使用產品所附LED做更換（勿使用其他形式燈泡做更換）。

備品更換說明


- 當LED不亮，其電壓會分散給電路中仍然點亮的LED上，可能造成其他LED繼續損壞。

1. **LED更換說明** - 使用產品所附LED，依照下列步驟：

- a. 確認電源移除。
- b. 將插頭由插座移除，移除插頭時勿拉扯電線。

2. **警告：**避免過熱危險，只能使用GE 3.3 Volt, 0.066 Watt LED做更換（於產品包裝中提供）。

3. 將不亮LED連基座由燈座垂直拉出，拿持備泡LED基座，插回原燈座。請注意燈座正確方向及將基座與燈座緊密結合。

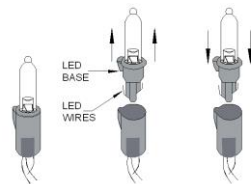

For Indoor And Outdoor Use
120 V 60 Hz for adapter

Imported by / Manufactured for:
Costco President Taiwan, Inc.
No. 656 Chung-Hwa 5th Road
Kaohsiung, Taiwan
Company Tax ID: 96972798
0800-885-889
www.costco.com.tw
MADE IN CHINA

If you need assistance or have any questions with set-up or operation visit us on the web at www.geholidaylighting.com
Nicolas Holiday Inc.
204 Spring Hill Rd
Trumbull, CT 06611

協順工藝股份有限公司
台北市光復北路35號9樓
電話: 02-27476269
保留所有權利